


Pairing the Remote Control

To the UltraPIR



Press & Hold both Buttons
Wait to hear a Beep

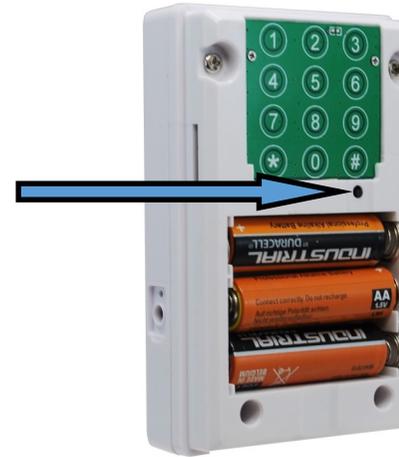

To the UltraDial



Press & Hold both Buttons
Wait to hear a Beep

