

9-10 Ryehill Court, Lodge Farm Ind.Est. New Duston, Northampton NN5 7EU

www.ultrasecuredirect.com

Tel: 01604 589414 Fax: 01604 582090 Email: info@ultrasecuredirect.com

Dear Customer,

Thank you for purchasing your KP GSM Alarm System.

Any remotes and detectors have already been paired into the Alarm Panel for your convenience.

Control Panel:

Installation Tips Below:

- The Power supply has been left connected into the internal terminal blocks for easy installation.
- Insert SIM Card before connecting any power (ensure the SIM Card has been registered and activated and it's the full-size SIM).
- Connect the battery onto the circuit board with the clip (located bottom left hand side of the circuit board above the 12v Input).
- Connect the power supply and switch ON.
- Turn the ON/OFF Switch ON (slide switch located left hand side of the circuit board just above the Siren Output).
- Close and lock the lid (2 x keys supplied).
- The screen should turn ON.

Programming:

To program the numbers into the panel, please see set up guide below:

SMS: Enter programming.

- o Centre Blue Button.
- o Select Set Up.
- o Centre Blue Button.
- o Enter your 4-digit Code (default 1234).
- o Scroll down to Basic Settings.
- o Centre Blue Button.
- Select SMS Phone Number.
- o Centre Blue Button.
- o Select Contact 1, 2 or 3.
- o Centre Blue Button.
- o Enter Phone Number.
- o Centre Blue Button to Save.
- o Repeat Process for the other 2 x Phone Numbers (if all three are being used).

Telephone Numbers:

To enter the Telephone Numbers, you want the Control Panel to Call, please repeat the Instructions above, but select Auto-Dial rather than SMS.

Siren:

If you have purchased any wired sirens or strobes, for your convenience these have already been connected to the relevant terminal blocks (if you disconnect these for installation, please make sure you re-connect them back in the same terminal blocks.

Arm/Disarming:

Press the Arm button on the alarm panel keypad (closed padlock button top right) or press the "A" button on the remote control, the alarm panel will enter arm state (delay time according to settings), you should see a closed padlock symbol on the display and the "ARM" light should be ON indicating its Fully Armed.

To Disarm the alarm, press the open padlock button (bottom right) on the alarm panel keypad and enter the password (default 1234), then press enter (blue button) or press the "B" button on the remote control.

Signal Repeaters.

If you have purchased any Wireless Signal Repeater these would have already been configured to your remotes and detectors. All you will need to do is plug these into a standard 3-pin socket outlet (plug supplied) and best to locate them at a midpoint from the alarm panel and any sensors (you may need to test in different locations for transmission range).

Please see manual for further information or contact our technical department on 01604 589414, option 2.