

To change the amount of time that the beams require to be broken for before they trigger please follow the steps below. Default sensitivity: 200ms or 100ms is as below.

- 1: Turn on both beams by pressing the ON/OFF button 3 times and wait for them to settle down.
- 2: Press and hold the ON/OFF button on both beams for 10 seconds and when you hear a beep release the buttons.
- 3: Press the ON/OFF button 6 times on both beams.
- 4: Make sure the beams are lined up with one another.
- 5: On the **receiver beam only** press and hold the ON/OFF button for 10 seconds and when you hear a beep release the button.
- 6: On the **receiver beam only** press the ON/OFF button 4 times and when you hear a beep you have reprogrammed your beams.

