 


USER MANUAL DA-600-TR

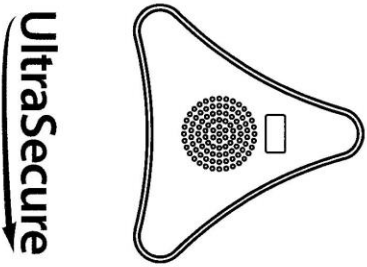


1. Packing List

Wireless Alarm Receiver	1 piece (includes UK 3-pin plug)
English Manual	1 piece

UltraSecure
Sales & Technical support
+44 (0) 1604 389414
ultrasecure.pro


2. Unit details

Wireless Alarm Receiver

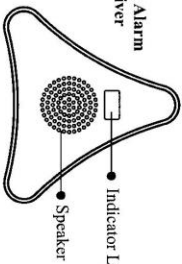


Indicator Light: Fixed LED = Receiver on / Stand by
Blinking LED = Learn mode / Adding sensor
Off = Receiver off / No sensors paired

Speaker: Will sound when a sensor is triggered

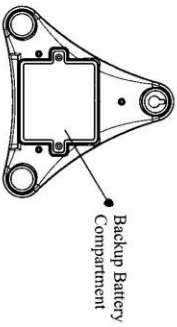

Backup Battery Compartment:
4 x AA 1.5v batteries (non rechargeable)
Can keep the wireless alarm receiver working continuously up to 100 hours during a power failure.

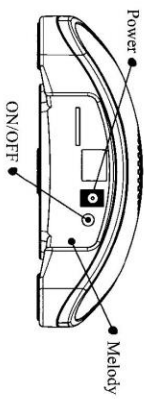


Power: Power plug (DC5V)
ON/OFF: Press once = Turn receiver ON/OFF
Hold = Change settings (different modes explained later)

Melody: Choose the melody per sensor (total 35 different melodies)


3. Operation Instructions

How to add sensors to the wireless alarm receiver
– up to 32 sensors can be added to the receiver

> **Step 1**
Plug in and turn on the wireless alarm receiver.

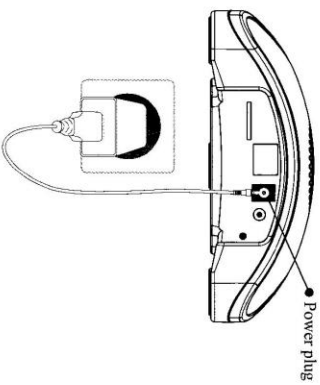

> **Step 2**
 Press and hold the "ON/OFF" button for 5 seconds and release when you hear a beep and the indicator light starts blinking.

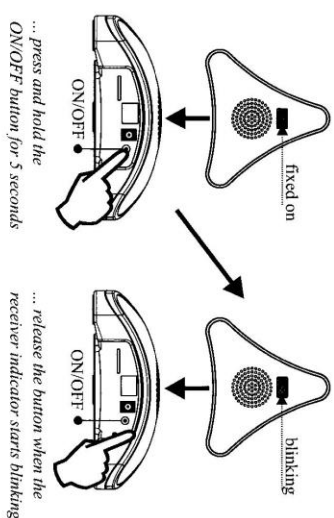

... press and hold the ON/OFF button for 5 seconds

... release the button when the receiver indicator starts blinking

> **Step 3**
 Trigger the sensor (by walking in front).




... a melody sounds and the indicator light stops blinking, meaning the sensor has been added to the receiver successfully

> **Step 4**
 Trigger the sensor again to confirm the sensor makes the receiver chime.


How to change the melody for a sensor
 – each sensor can have its own melody

> **Step 1**
 Trigger the sensor for which you wish to change the melody.

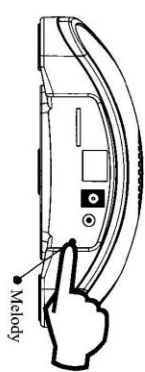


> **Step 2**
 Press the "Melody" button to choose the melody for this sensor, there are 35 tones to choose from, the melody you hear is the one that will play each time for this sensor.

How to adjust the volume of the receiver
 – there are 4 levels of volume

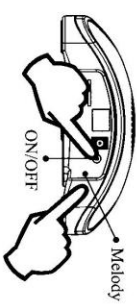


Press and hold the "ON/OFF" button, and press the "Melody" button to switch between the 4 volume levels.

How to delete sensors from the receiver
 – this will delete all sensors from your receiver!

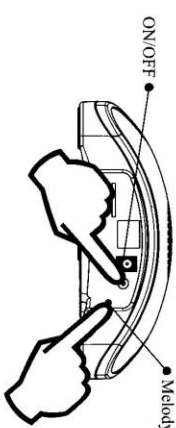

Press and hold both the "ON/OFF" and "Melody" buttons for 10 seconds until you hear a long beep, then release. All sensors are deleted, you can re-learn the sensors needed.

4. Technical Specifications

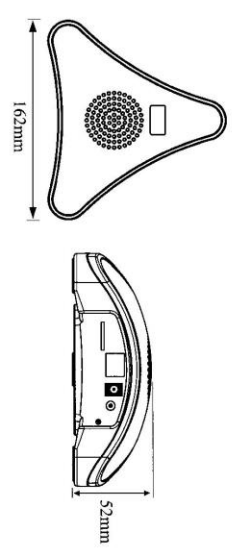

Technical Parameters

Working Voltage	DC5V
Working Current	Standby 20mA, Chirping 300mA,
Wireless Frequency	433MHz ESK+FHSS
Backup battery	4 x AA 1.5V batteries (not included)

UltraSecure
 Sales & Technical support
 +44 (0) 1604 589414
 ultrasecure.pro

4040S20190116